


PART LIST and DIAGRAM
Pneumatic Airless Pump IP 281 ABRASPRAY - (30:1) - paint part

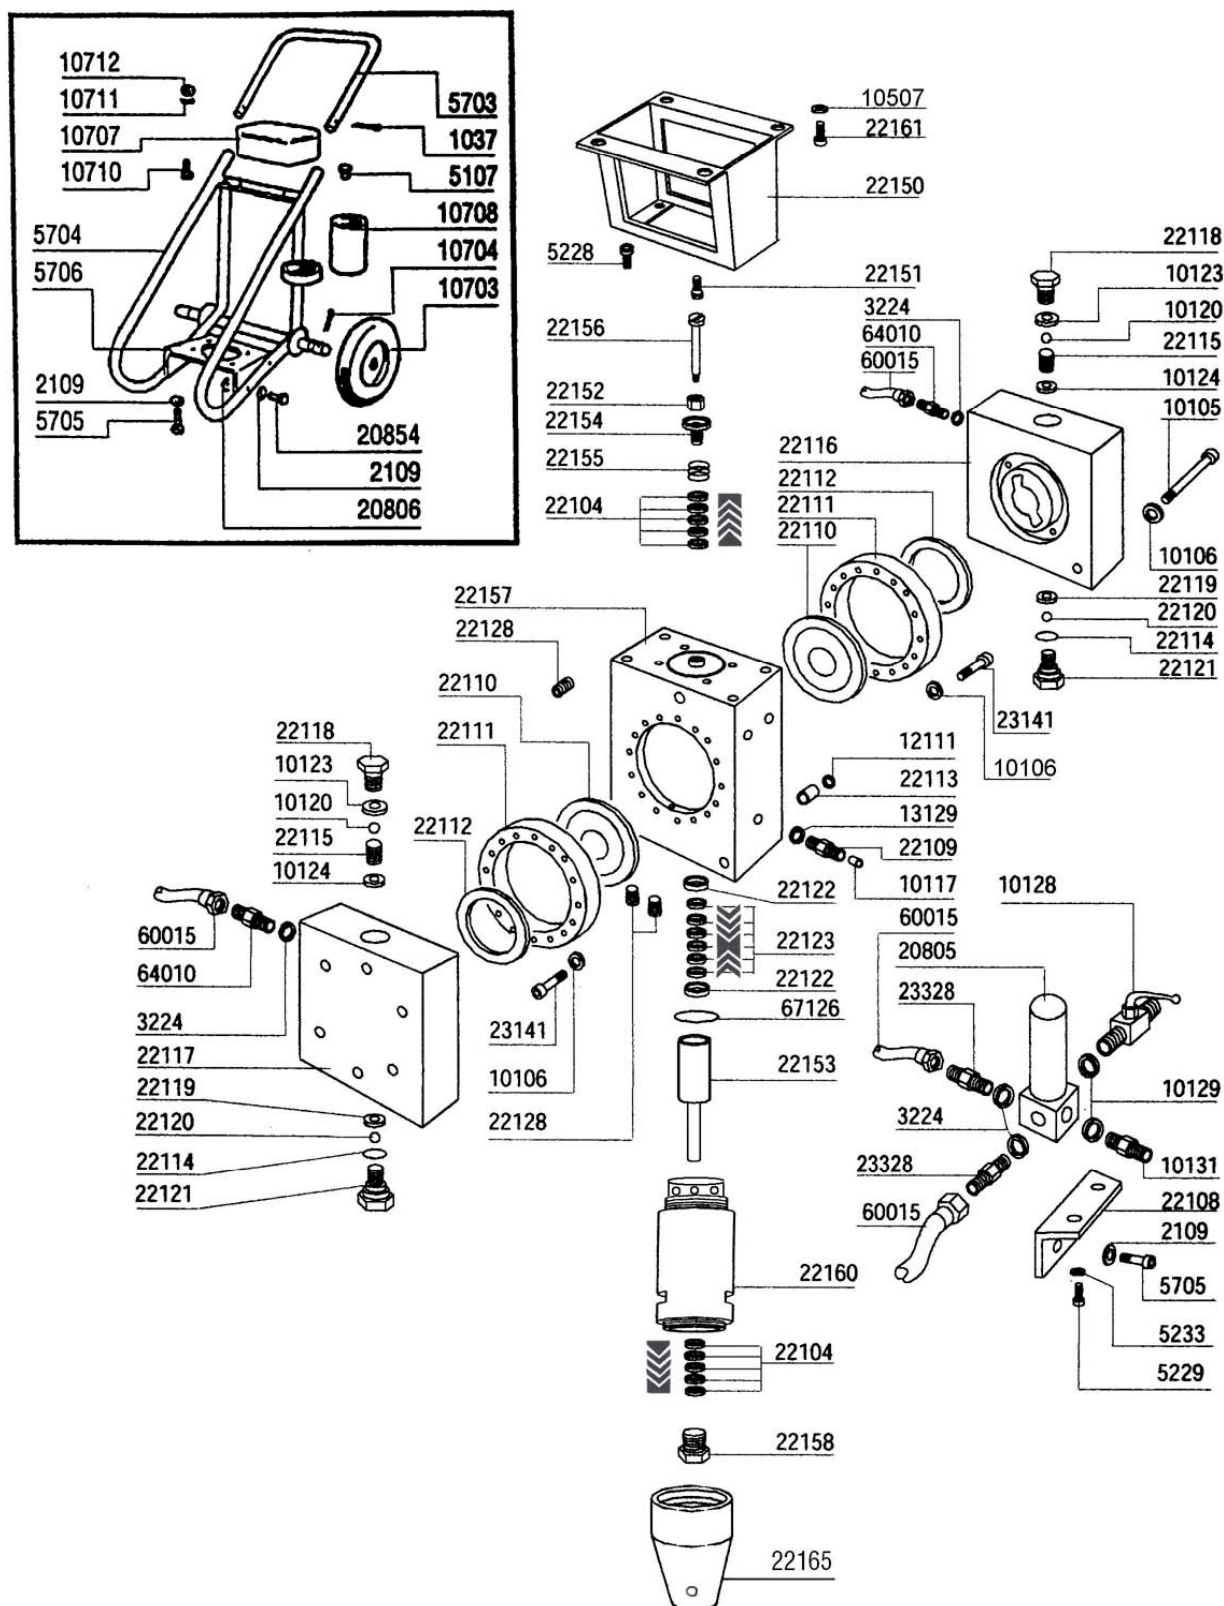

PART LIST and DIAGRAM

Pneumatic Airless Pump IP 281 ABRASPRAY - (30:1) - paint part

Ref.	Description	Q.ty
22000	Pneumatic airless pump ABRASPRAY	
002109	SCHNOOR WASHER	2
003224	COPPER GASKET	6
005228	FLANGE SCREW	4
005229	FIXING BOLT	2
005233	WASHER SCHNOOR	2
010105	BOLT	12
010106	WASHER SCHNOOR	26
010117	INLET SEAL	1
010120***	BALL dia.11, T.C.	2
010123***	COPPER GASKET	2
010124***	BALL SEAT GASKET	2
010128*	DUMP VALVE, S.S.	1
010129*	COPPER SEAL	1
010131	NIPPLE M1/4" - M16x1,5 - S.S.	1
010507	WASHER	1
012111	O.R. RING IN TEFLON, SUCTION VALVE	2
013129	COPPER GASKET 1/2"	1
020805	LINE FILTER, DOUBLE INLET	1
020806	BOLT	1
020854	BOLT	1
022104	SEAL PACKINGS	2
022108	LINE FILTER SUPPORT	1
022109	NIPPLE M 36x2 M1/2" - S.S.	1
022110	DIAPHRAGM - IP 281	2
022111	SEAL RING	2
022112	DIAPHRAGM RING	2
022113	O.R. SEAL TUBE	2
022114**	GASKET	2
022115***	BALL SEAT, COMPLETE	2
022116	HEAD BLOCK, RIGHT	1
022117	HEAD BLOCK, LEFT	1
022118***	COMPRESSION VALVE PLUG	2
022119**	COPPER GASKET 3/8"	3
022120**	BALL dia.14, T.C.	2
022121**	SUCTION VALVE COMPLETE IP 281	2
022122	UPPER/LOWER CUP, PACKINGS	2
022123	CENTRAL PACKING, DOUBLE EFFECT	1
022128	PLUG, DRAIN 1/4"	3
022150	PAINT AIR SUPPORT	1
022151	CONNECTING SCREW	1

Ref.	Description	Q.ty
022152	RING NUT	1
022153	PISTON ROD dia.30	1
022154	PRESSING NUT	1
022155	PRESSING SPRING	1
022156	UPPER SHAFT dia.13	1
022157	PUMP HOUSING	1
022158	LOWER PACKING SCREW	1
022160	PLUG	1
022161	BOLT	4
022165	CAP	1
023141	BOLT	12
023328	NON-BACKFLOW VALVE KIT	1
060015	H.P. HOSE dia.10 - cm.70	2
064010	NIPPLE S.S. MM16x1,5	4
067126	O.R. TEFLON	1


Trolley:

001037	SPLIT PIN, UNIVERSAL TROLLEY	2
002109	SCHNOOR WASHER	4
005107	PLUG dia.30	2
005703	HANDLE, UNIVERSAL TROLLEY	1
005704	BODY, UNIVERSAL TROLLEY	1
005705	FIXING BOLT	2
005706	PLATE, UNIVERSAL TROLLEY	1
010703	WHEEL	2
010704	COTTER PIN	4
010707	TOOL BOX "TAIVER"	1
010708	SUCTION SYSTEM HOLDER	1
010710	FIXING BOLT	4
010711	WASHER	8
010712	FIXING NUT	4

Spare parts suggested:

10328	DUMP VALVE KIT,S.S. (*)
22308	SUCTION VALVE KIT (**)
22318	COMPRESSION VALVE KIT (***)

PART LIST and DIAGRAM
Pneumatic Airless Pump IP 281 ABRASPRAY - (30:1) - pneumatic part

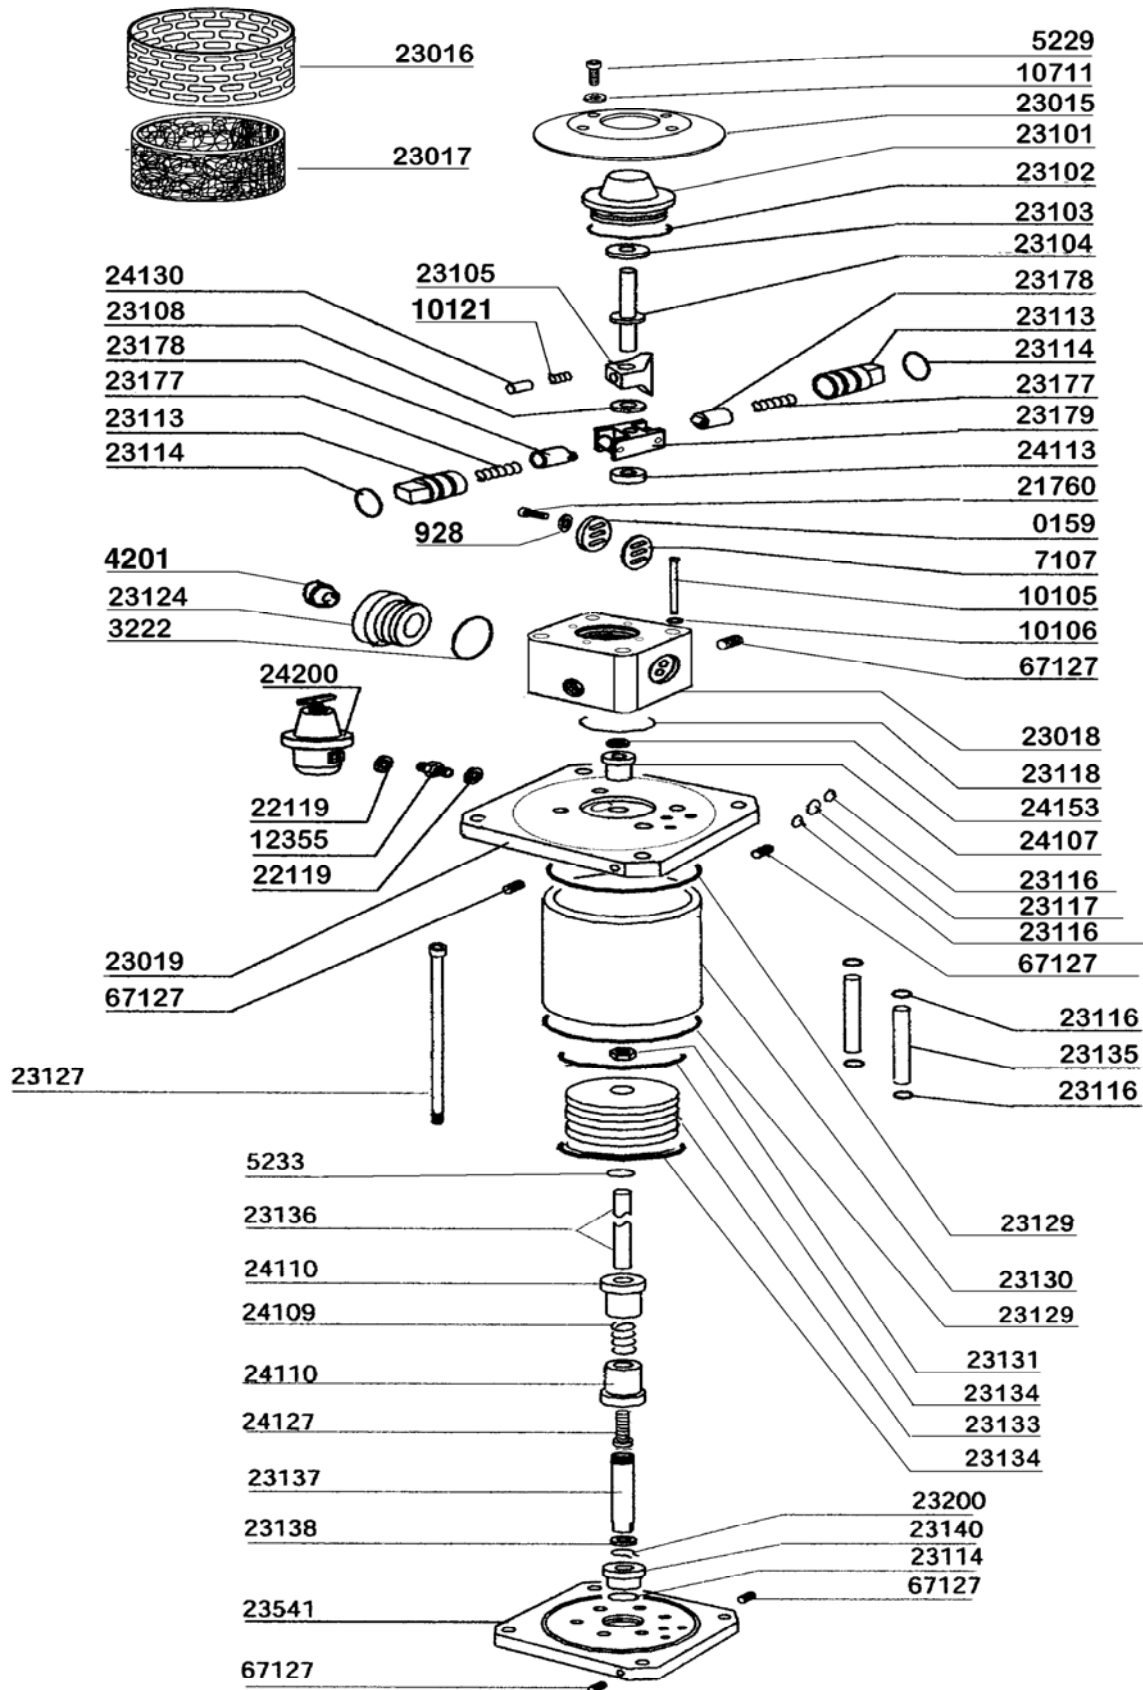

PART LIST and DIAGRAM

Pneumatic Airless Pump IP 281 ABRASPRAY - (30:1) - pneumatic part

Ref.	Description	Q.ty	Ref.	Description	Q.ty
22000	<i>Pneumatic airless pump ABRASPRAY</i>				
000159	CAP	1	023124	AIR CLUTCH FLANGE	1
000928	WASHER, SUCTION VALVE	1	023127	SOCKET SCREW	4
003222	O.R.	1	023129	GASKET	2
004201	OIL LEVEL GLASS	1	023130	AIR CYLINDER	1
005229	FIXING BOLT	4	023131	PISTON FIXING NUT	1
005233	WASHER SCHNOOR	1	023133	AIR MOTOR PISTON	1
007107	GASKET	1	023134	LUBRORING	2
010105	BOLT	4	023135	AIR CONNECTION TUBE	2
010106	WASHER SCHNOOR	4	023136	ROD	1
010121	SPRING	1	023137	SHAFT, MOTOR PISTON	1
010711	WASHER	4	023138	SEEGER	1
012355	NIPPLE MM3/8"	1	023140	LOWER FLANGE BUSH	1
021760	FIXING SCREW	2	023177	SPRING FOR REVERSAL KIT	2
022119	COPPER GASKET 3/8"	2	023178	REVERSAL KIT PISTON	2
023015	COVER, MOTOR SILENCER	1	023179	REVERSAL CONTROL SYSTEM	1
023016	FILTER NET	1	023200	RING	1
023017	SILENCER	1	023541	LOWER FLANGE	1
023018	AIR CONTROL VALVE BODY	1	024107	SELF-LUBRICATING BUSH	1
023019	UPPER FLANGE	1	024109	SPRING	1
023101	COVER COMPLETE WITH BUSH	1	024110	UPPER GUIDE	2
023102	GASKET	1	024113	LOWER BUFFER	1
023103	UPPER BUFFER	1	024127	BOLT	1
023104	PILOT SHAFT	1	024130	SPRING GUIDE	1
023105	AIR CONTROL VALVE SUPPORT	1	024153	LUBRORING	1
023108	WASHER	1	024200	PRES. REDUCER 3/8" CPL. WITH GAUGE	1
023113	PISTON BODY	2	067127	CONICAL PLUG 1/4"	5
023114	GASKET	3			
023116	GASKET	8			
023117	GASKET	1			
023118	GASKET	1			