


PART LIST AND DIAGRAM
Pumping housing HTP 15000

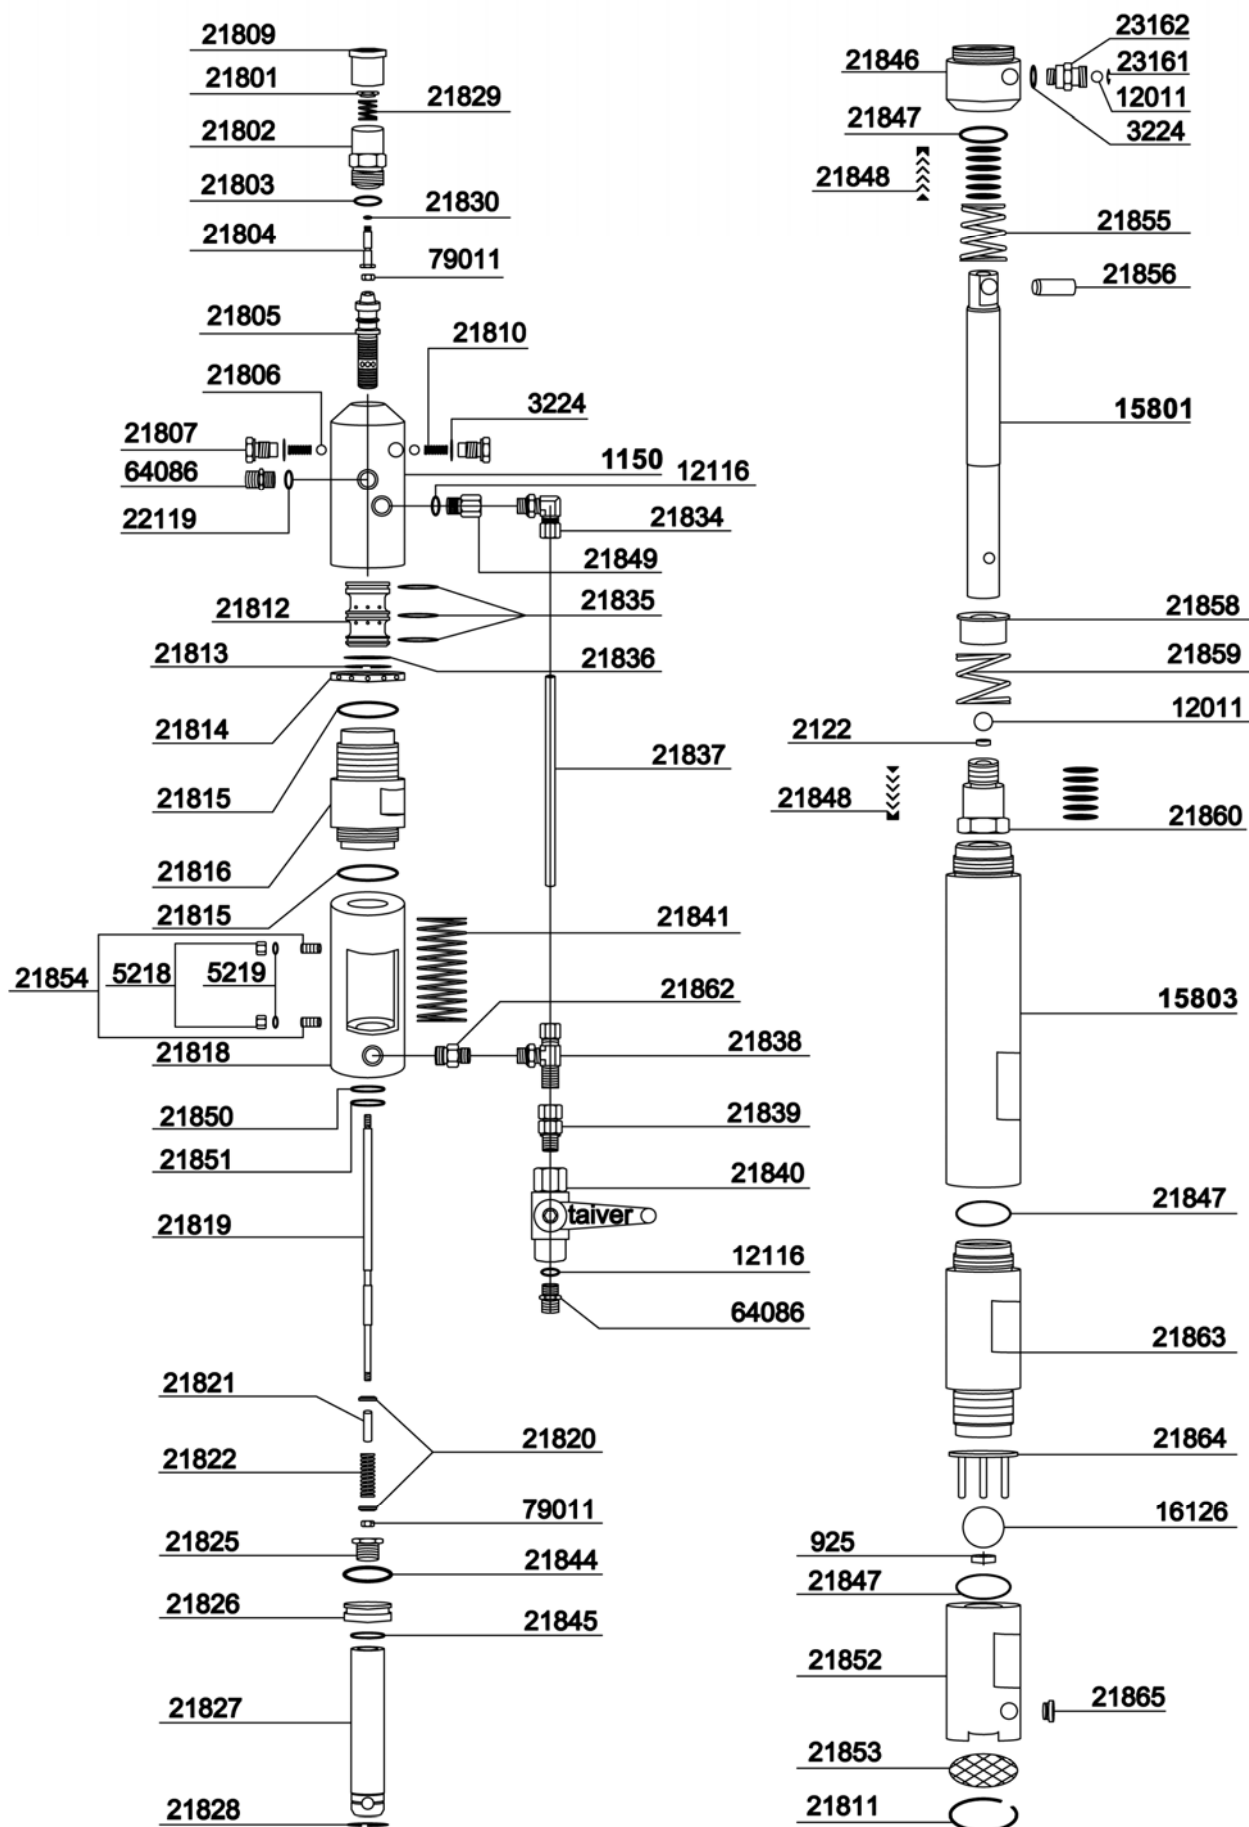

Technical data subject to change

PART LIST AND DIAGRAM

Pumping housing HTP 15000


Ref.	Description	Q.ty
15800	Pumping part HTP 15000	
000925***	SEAT	1
001150	REVERSAL BODY	1
002122**	SEAT	1
003224	COPPER GASKET	3
005218	FIXING NUT	2
005219	FIXING WASHER	2
012011**	BALL dia.11, S.S.	2
012116	COPPER GASKET	2
015801	MATERIAL PISTON	1
015803	SPACER, PAINT PART	1
016126***	BALL dia.25 IN S.S.	1
021801	RESET NUT	1
021802	RELEASE BODY	1
021803	O-RING	1
021804	RESET PIN	1
021805	MOBILE FUSE	1
021806	BALL, TRACER POINT	2
021807	TRACER POINT	2
021809	PLUG	1
021810	SPRING, TRACER POINT	2
021811	BALL STOP RING	1
021812	PISTON SLEEVE, FUSE	1
021813	SEEGER S.S.	1
021814	FIXING RING NUT	1
021815	O-RING	2
021816	OLEODYNAMIC CYLINDER	1
021818	PUMPING HOUSING DOUBLE	1
021819	VALVE ROD	1
021820	WASHER	2
021821	SPRING GUIDE	1
021822	SPRING	1
021825	NUT	1
021826	SCRAPER PISTON	1
021827	OLEODYNAMIC SHAFT	1
021828	STOP RING	1
021829	SPRING	1
021830	O-RING	1
021834	NIPPLE	1
021835	OR SEAL	3
021836	WASHER	1
021837	OIL HOSE	1
021838	"T" FITTING 3/8"	1
021839	NIPPLE 3/8 FF	1
021840	VALVE 3/8 FF	1
021841	SAFETY SPRING	1
021844	PLUNGER SCRAPER	1
021845	O-RING	1
021846	PUMPING HOUSING CENTRAL	1
021847***	O-RING	2
021848*	UPPER & LOWER PACKING	2
021849	EXTENSION	1
021850	STATIC SCRAPER	1
021851	DUST COVER	1
021852***	SUCTION BODY	1
021853	FILTERING DISC	1

Ref.	Description	Q.ty
021854	FIXING SCREW	2
021855	SPRING, UPPER PACKING	1
021856	PIN	1
021858	CUP SPRING	1
021859	SPRING	1
021860**	COMPRESSION VALVE BODY	1
021862	CONNECTING NIPPLE	1
021863	PRODUCT CYLINDER	1
021864	BALL STOP COMPLETE	1
021865	PLUG 1/2" S.S.	1
022119	COPPER GASKET	1
023161	BALL STOP RING	1
023162	NON-BACKFLOW VALVE NIPPLE	1
064086	NIPPLE M3/8" - M16x1,5 - S.S.	2
079011	SELF-LOCKING NUT	2

Spare parts suggested:

021603	UPPER AND LOWER PACKINGS SET (* x2)
021618	COMPRESSION VALVE KIT (**)
021648	SUCTION VALVE KIT (***)

PART LIST AND DIAGRAM
Hydraulic part & Trolley - HTP 15000

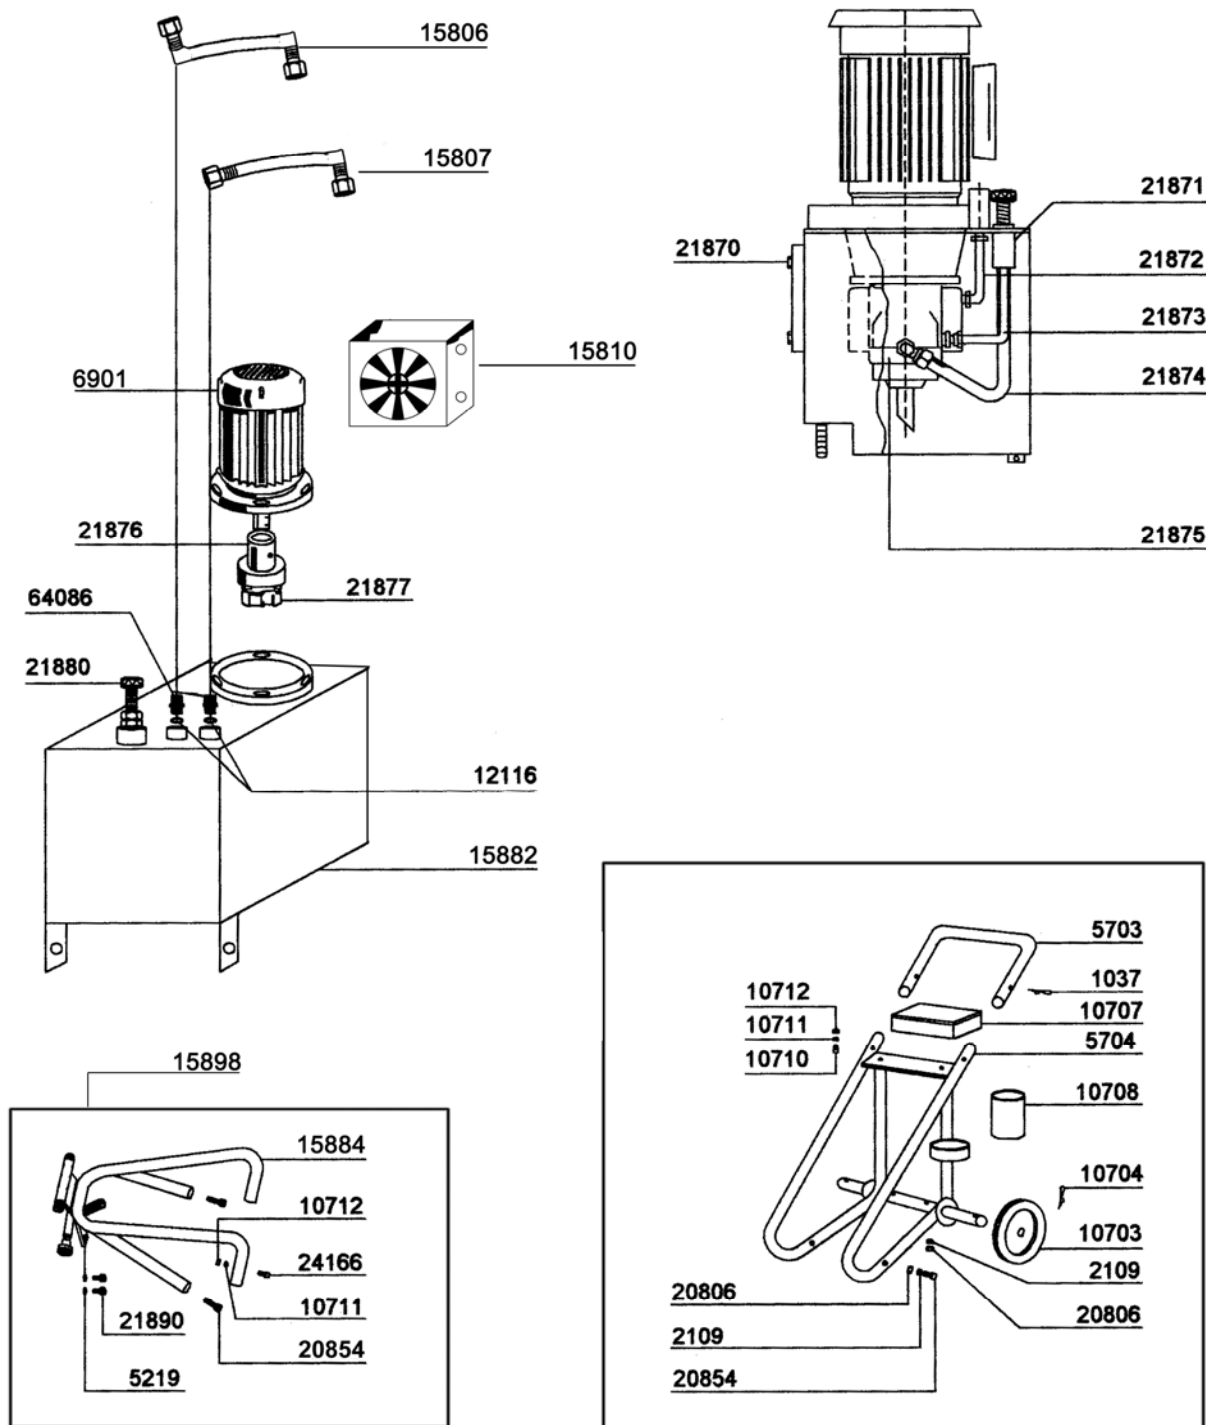

PART LIST AND DIAGRAM
Hydraulic part & Trolley - HTP 15000

Ref.	Description	Q.ty
001037	SPLIT PIN, UNIVERSAL TROLLEY	2
002109	SCHNOOR WASHER	4
005703	HANDLE, UNIVERSAL TROLLEY	1
005704	BODY, UNIVERSAL TROLLEY	1
006901	ELECTRIC MOTOR 220 Volt/50 Hz - HP2	1
010703	WHEEL	2
010704	COTTER PIN	2
010707	TOOL BOX	1
010708	SUCTION SYSTEM HOLDER	1
010710	FIXING BOLT	2
010711	WASHER	2
010712	FIXING NUT	2
012116	COPPER GASKET	2
015806	CONNECTION HYDRAULIC HOSE	1
015807	RETURN HYDRAULIC HOSE	1
015810	RADIATOR	1
015882	HYDRAULIC BODY	1
020806	BOLT	4
020854	BOLT	2
021870	OIL LEVEL AND TEMP. INDICATOR	1
021871	PRESSURE REGULATING VALVE	1
021872	CONNECTING HOSE, HEAT EXCHANGER	1
021873	RETURN HOSE	1
021874	DELIVERY HOSE	1
021875	HYDRAULIC PUMP	1
021876	HALF-JOINT	1
021877	CLUTCH INSERT	1
021880	REGULATING KNOB	1
024166	BOLT	2
064086	NIPPLE M3/8" - M16x1,5 - S.S.	2

Ref.	Description	Q.ty
015898	KIT SUPPORT HTP 15000	
005219	WASHER	2
010711	WASHER	2
010712	FIXING NUT	2
015884	SUPPORT	1
020854	BOLT	2
021890	SCREW	2