


PART LIST AND DIAGRAM

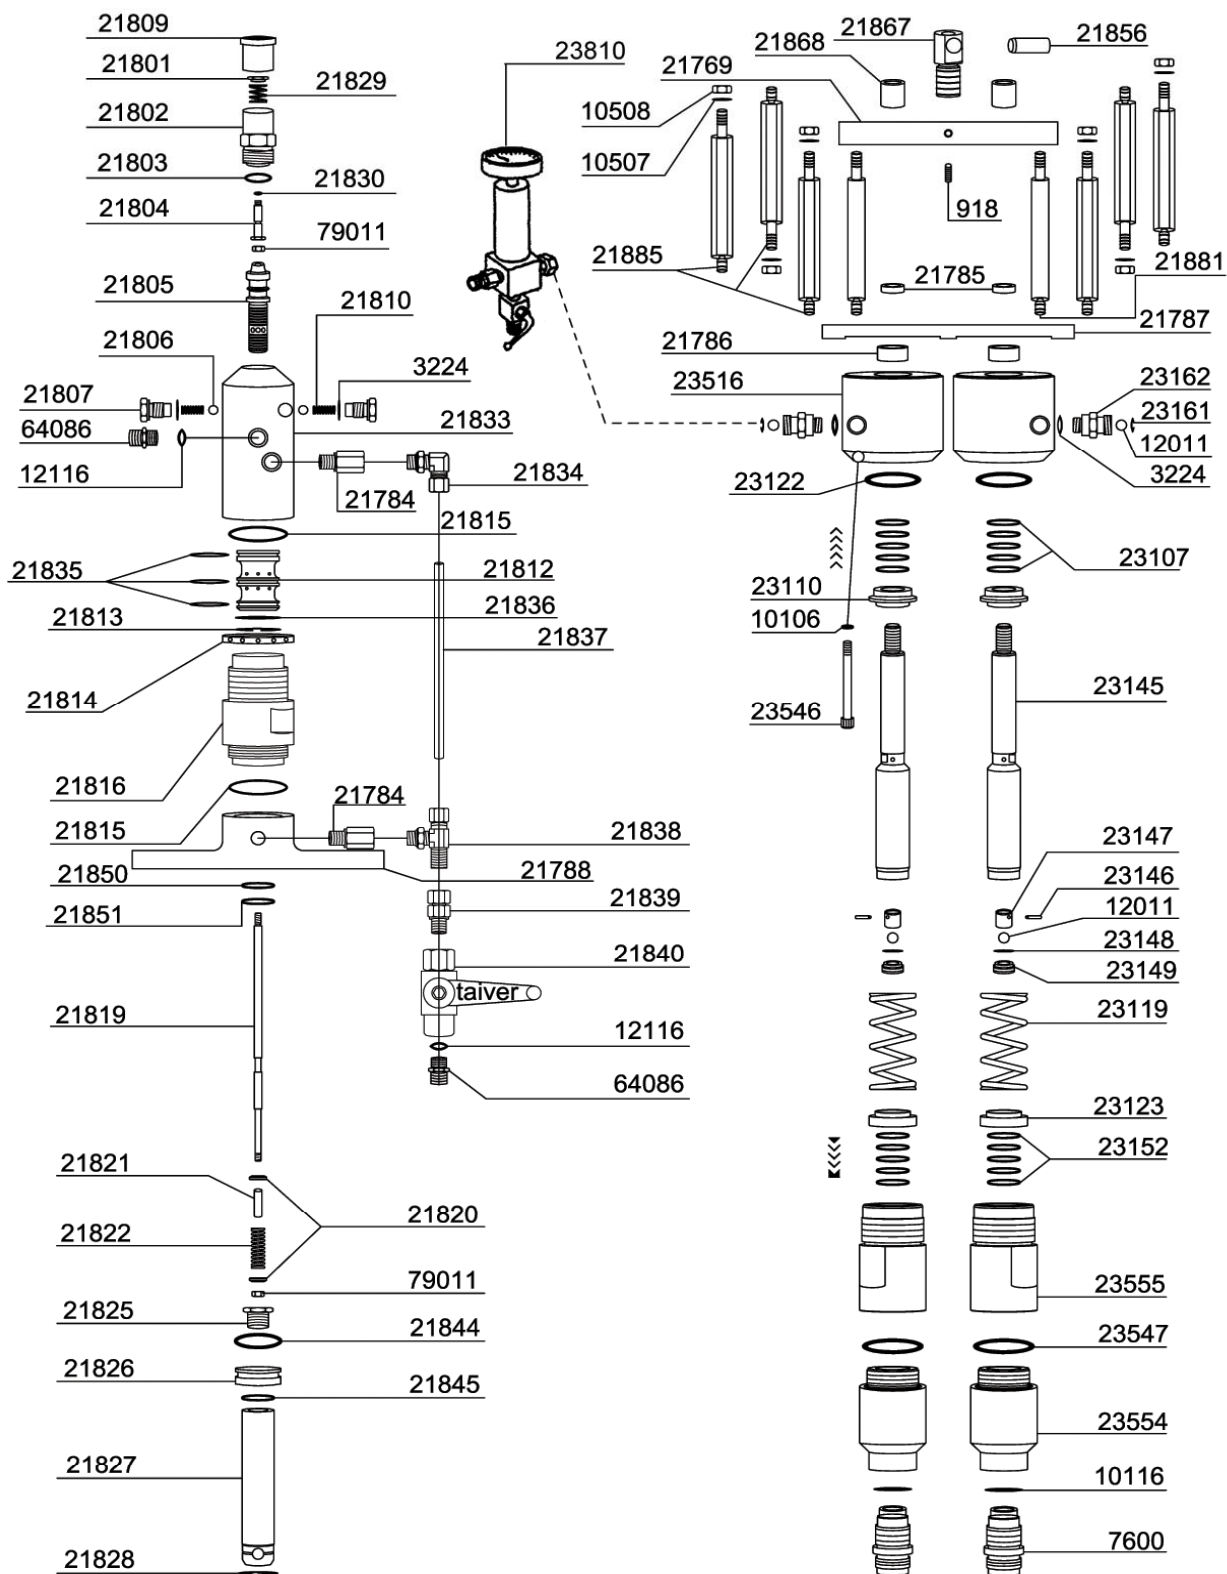

PART LIST AND DIAGRAM


Pumping housing HTP 21000 Bicomponent - 18 Ltr.

Ref.	Description	Q.ty	Ref.	Description	Q.ty
21451	Pumping part HTP 21000 Bic. - 18 lt.				
000918	SCREW	2	021885	TIE-ROD	6
003224	COPPER GASKET	4	023107***	UPPER SEALS	2
007600*	SUCTION VALVE FOR PNEUMATIC	2	023110	UPPER PRESSURE WASHER	2
010106	WASHER SCHNOOR	8	023119	SPRING	2
010116*	SUCTION VALVE GASKET	2	023122	GASKET	2
010507	WASHER	8	023123	SUPPORT	2
010508	NUT	8	023145	PISTON	2
012011**	BALL dia.11, S.S.	4	023146	BALL-STOP PIN dia.3	2
012116	COPPER GASKET	2	023147	BALL CONTROL BUSH	2
021769	SUPPORT HTP 21000 - 18 lt.	1	023148**	COPPER GASKET	2
021784	SPACER MF 3/8"	2	023149**	BALL SEAT COMPLETE	2
021785	SPACER HTP 21000 18 lt.	2	023152***	LOWER SEALS	2
021786	SHAFT'S BUSH	2	023161	BALL STOP RING	2
021787	LOWER FLANGE	1	023162	NON-BACKFLOW VALVE NIPPLE	2
021788	UPPER FLANGE	1	023516	MAIN PUMPING HOUSING	2
021801	RESET NUT	1	023546	PUMPING HOUSING BOLT	8
021802	RELEASE BODY	1	023547	SEAL GASKET	2
021803	O-RING	1	023554	LOWER PUMPING HOUSING	2
021804	RESET PIN	1	023555	UPPER PUMPING HOUSING	2
021805	MOBILE FUSE	1	064086	NIPPLE M3/8" - M16x1,5 - S.S.	2
021806	BALL, TRACER POINT	2	079011	SELF-LOCKING NUT	2
021807	TRACER POINT	2			
021809	PLUG	1			
021810	SPRING, TRACER POINT	2			
021812	PISTON SLEEVE, FUSE	1			
021813	SEEGER S.S.	1			
021814	FIXING RING NUT	1			
021815	O-RING	2			
021816	OLEODYNAMIC CYLINDER	1			
021819	VALVE ROD	1			
021820	WASHER	2			
021821	SPRING GUIDE	1			
021822	SPRING	1			
021825	NUT	1			
021826	SCRAPER PISTON	1			
021827	OLEODYNAMIC SHAFT	1			
021828	STOP RING	1			
021829	SPRING	1			
021830	O-RING	1			
021833	REVERSAL BODY	1			
021834	NIPPLE	1			
021835	OR SEAL	3			
021836	WASHER	1			
021837	OIL HOSE	1			
021838	"T" FITTING 3/8"	1			
021839	NIPPLE 3/8 FF	1			
021840	VALVE 3/8 FF	1			
021844	PLUNGER SCRAPER	1			
021845	O-RING	1			
021850	STATIC SCRAPER	1			
021851	DUST COVER	1			
021856	PIN	1			
021867	PIN	1			
021868	BUSH	2			
021881	COLUMN	2			

Spare parts suggested:

7608	SUCTION VALVE KIT (*)
10328	DUMP VALVE KIT,S.S.
23318	COMPRESSION VALVE KIT (**)
23803	UPPER AND LOWER PACKINGS SET (***)

PART LIST AND DIAGRAM
Hydraulic part & Trolley - HTP 21000 Bicomponent - 18 Ltr.

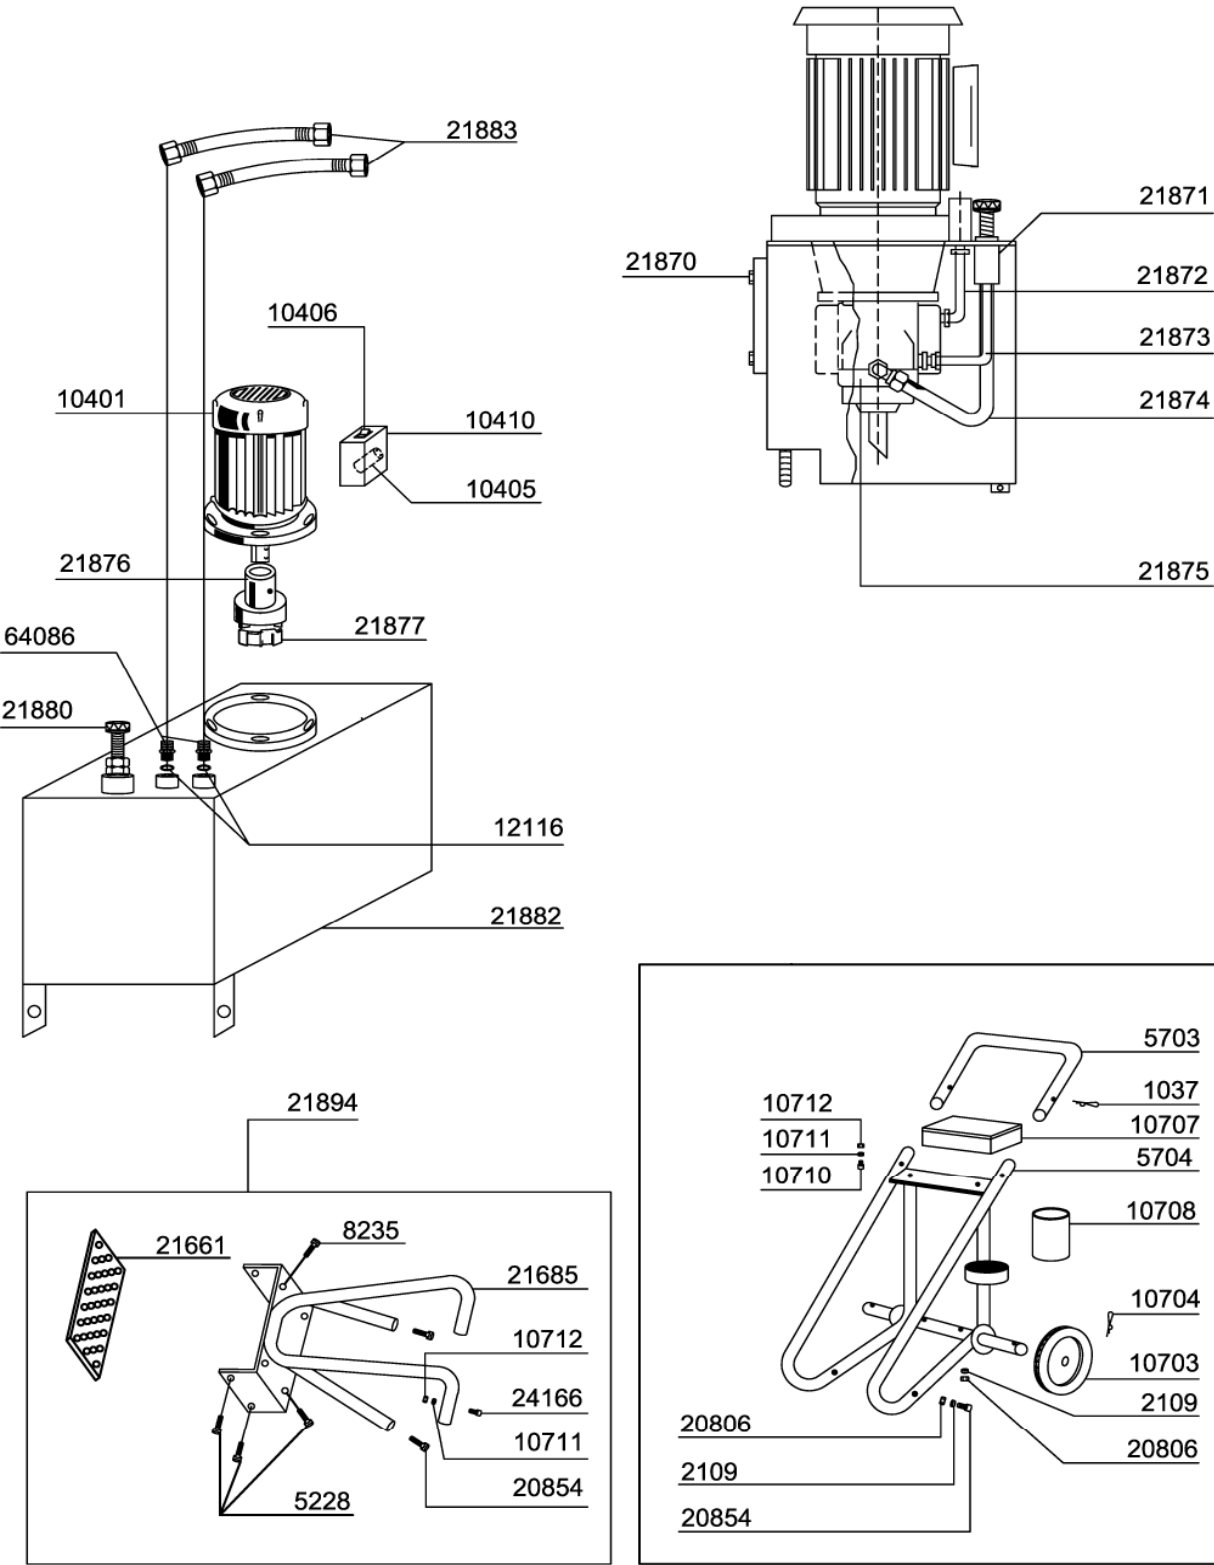

PART LIST AND DIAGRAM

Hydraulic part & Trolley - HTP 21000 Bicomponent - 18 Ltr.

Ref.	Description	Q.ty
001037	SPLIT PIN, UNIVERSAL TROLLEY	2
002109	SCHNOOR WASHER	4
005703	HANDLE, UNIVERSAL TROLLEY	1
005704	BODY, UNIVERSAL TROLLEY	1
010401	ELECTRIC MOTOR 220 Volt/50 Hz - HP3	1
010405	CONDENSER 50 MF	1
010406	SWITCH COMPLETE 220 Volt	1
010410	CONDENSER BOX	1
010703	WHEEL	2
010704	COTTER PIN	2
010707	TOOL BOX	1
010708	SUCTION SYSTEM HOLDER	1
010710	FIXING BOLT	2
010711	WASHER	2
010712	FIXING NUT	2
012116	COPPER GASKET	2
020806	BOLT	4
020854	BOLT	2
021870	OIL LEVEL AND TEMP. INDICATOR	1
021871	PRESSURE REGULATING VALVE	1
021872	CONNECTING HOSE, HEAT EXCHANGER	1
021873	RETURN HOSE	1
021874	DELIVERY HOSE	1
021875	HYDRAULIC PUMP	1
021876	HALF-JOINT	1
021877	CLUTCH INSERT	1
021879	HEAT EXCHANGER	1
021880	REGULATING KNOB	1
021882	HYDRAULIC BODY	1
021883	CONNECTING HOSE cm. 60	2
024166	BOLT	2
064086	NIPPLE M3/8" - M16x1,5 - S.S.	2

Ref.	Description	Q.ty
021894	KIT SUPPORT HTP 21000 BIC. 18 LT.	
005228	FLANGE SCREW	6
008235	BOLT	2
010711	WASHER	2
010712	FIXING NUT	2
020854	BOLT	2
021661	BULKHEAD, HTP 21000 - 18 LT.	1
021685	SUPPORT, PUMP HTP 21000 18 LT.	1
024166	BOLT	2